 


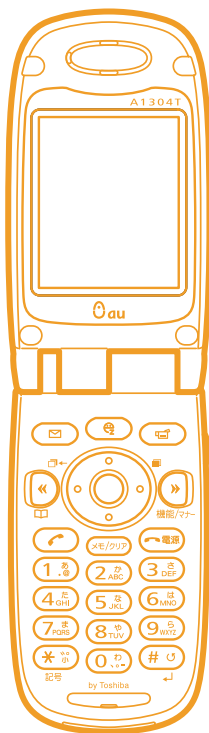

A1304T

Basic Manual



Before Use

**Making and
Receiving Calls**

**Using the
Phone Book**

Using Mail

**Using
the Camera**

Using EZweb

**Entering
Characters**

Troubleshooting

Other Features

Introduction

Thank you for purchasing the A1304T. Before using your A1304T, be sure to read the A1304T Basic Instruction Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

Printed Manuals for the A1304T (Japanese)

The A1304T comes with the Basic Instruction Manual, Instruction Manual, and Smart Mode Operation Manual.

A1304T Basic Instruction Manual


Equivalent to this English PDF manual.

A1304T Instruction Manual

English version is not available.

A1304T Smart Mode Operation Manual

English version is not available.

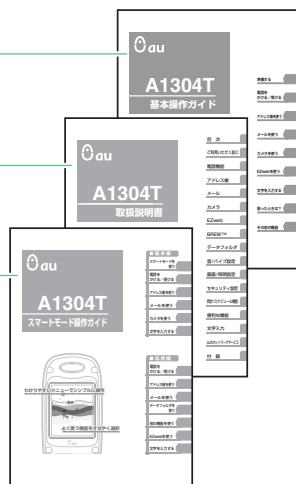

In some of the screens used for descriptions in this manual, the indicator display areas at the top and bottom and the soft key operation display area at the bottom may be omitted to simplify descriptions. Also, the typeface and shape of fonts used for characters may differ from those used for characters in actual screens or some characters may be omitted.

Cell Phone Etiquette

- The cell phone always emits weak radio waves when the power is on.
- Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

● The use of cell phones is not allowed in some places

- Do not use the cell phone while you are driving. Doing so is both dangerous and forbidden by law.
- Radio waves may interfere with airplane operation. Be sure to turn the cell phone off before you board airplanes.



● Radio waves from cell phones may interfere with medical electrical equipment

- Some people close to you in busy places such as crowded trains may be using a pacemaker. Turn the cell phone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.



● Be considerate of where you use the cell phone and how loudly you talk

- Do not make calls from cinemas, theaters, museums, libraries, and other similar places. Turn the power off or set the manner mode to prevent others around you from being inconvenienced by ring tones for incoming calls or mail.



- Do not use the cell phone in places where you will be in the way of others.
- Move to areas where you will not inconvenience others on trains or in hotel lobbies.
- Take care not to talk too loudly during calls.



- Obtain the permission of other people before you take their photo with the cell phone's camera.



Cell Phone Basics

What the A1304T Offers

Phone

Your cell phone is packed with useful phone features such as a phone book, call history, and manner mode.



Read from
page **23**

Internet

You can read the news, or download melodies and wallpaper.



Read from
page **63**

Mail

You can send mail to other cell phones or PCs.




Read from
page **41**

Camera

You can take photos and send them by e-mail easily.




Read from
page **57**

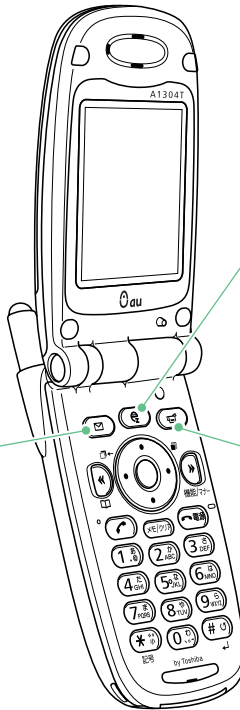


Manner Mode and Message Memo

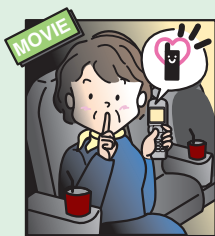

Manner Mode — for Turning Off the Sound



You can use manner mode to turn off the incoming call ring tone and other tones to prevent others from being inconvenienced.

When the standby screen is displayed, hold down  for at

機能/マナー

least one second, use  to select *Silent Mode*, and press  (Slct).





See page

29

Message Memo — for when You Cannot Answer Calls



When you cannot answer calls, the cell phone can play an answering message and record messages.

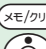When the standby screen is displayed, hold down  for at least one second, use  to select *Message Mode*, and press

 (Slct).



See page


32

Checking the Power, Signal Strength, and Battery Level

Normally, you should leave the cell phone turned on.



To make or receive calls, you need to turn the power on.

Hold down  for at least one second.


See page

14

You cannot talk on the cell phone if a signal is not being received.



Even in service areas, there are places where it is difficult to receive a signal.

 indicates the signal strength.




See page

14

Pay attention to the battery level.



When the battery level is low, the cell phone may not function properly.

 indicates the battery level.



See page

14

Spam and One-ring Calls

If you receive spam:

You can set the mail filters to reject only specific mail or mail indicated by "未承諾広告※," which tends to be spam.

The following mail filters are available for rejecting spam:

- ・ 未承諾広告フィルター
(Unsolicited advertisement filter)
- ・ アドレスフィルター (Address filters)
 - 指定拒否設定 (for not receiving specific mail)
 - 指定受信設定 (for receiving specific mail only)




See page
50

If you receive a call from an unknown number:



It may be an attempt to get you to return a call to a service with very high charges.

Incoming History		
01	9/17 16:00	030002XXXX
02	9/16 15:35	030001XXXX
03	9/15 14:48	Tom Daniels
04	9/14 13:30	080003XXXX

This is known as a "one-ring call" and is indicated by  in the incoming history.

See page
26

Contents

Introduction	2
Cell Phone Etiquette	3
Cell Phone Basics	4
Contents	8

●Before Use 10

Checking the Contents of the Box	10
Names of Parts	11
Charging the Battery Pack	12
Extending the Antenna	13
Turning On the Power	14
Turning Off the Power	14
Making Initial Settings (Bilingual Setting)	15
Learning the Basics	17
Using Menus	19
Indicators	21
Checking Your Phone Number and E-mail Address	22

●Making and Receiving Calls 23

Making a Call	23
Answering a Call	24
Returning Calls and Redialing (Incoming/Outgoing History)	25
One-ring Calls	26
Adjusting the Incoming Ring Tone Volume	27
Setting the Manner Mode	29
Adjusting the Earpiece Volume during a Call	30
Changing the Incoming Ring Tone	30
Recording Messages when You Cannot Answer Calls	32
Playing Messages	33

●Using the Phone Book 34

Saving a Phone Book Entry	34
Calling a Phone Number from the Phone Book	37
Editing Phone Book Entries	38
Saving a Phone Number from the Incoming History	40

●Using Mail 41

Using E-mail	41
Changing Your E-mail Address	42

 
 
Creating and Sending E-mail Messages	45
Opening Received E-mail Messages	48
Rejecting Spam	50
Replying to Received E-mail Messages	51
Using C-mail	53
Creating and Sending C-mail Messages	54
Opening Received C-mail Messages	56
●Using the Camera	57
Recording Movies	57
Playing Back Movies	59
Taking Photos	60
Viewing Photos	61
Sending Images Attached to E-mail Immediately	62
Photo Mail Service	62
●Using EZweb	63
EZweb (Internet)	63
Accessing EZweb Information Sites	64
Viewing Information Sites	65
Downloading Melodies	66
Saving Bookmarks of Frequently Accessed Pages	68
Using Bookmarks to Access Pages	69
Checking Charges	70
●Entering Characters	71
Character Entry Modes	71
Entering Single-byte Alphanumeric Characters	71
Entering E-mail Addresses	73
Entering Pictograms	75
●Troubleshooting	76
●Other Features	77
●Index	79

Before Use

 
Checking the Contents of the Box

The box contains the cell phone and accessories.

- Cell phone
- Battery pack (built-in)

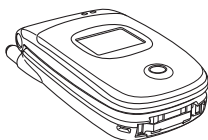

- Toshiba AC adapter 01
- Desktop holder

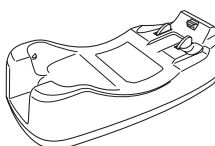

- Hand strap



- Basic Instruction Manual (Japanese)



- Instruction Manual (Japanese)





- Smart Mode Operation Manual (Japanese)



- Warranty (Japanese)
- Safety precautions (Japanese)



Names of Parts

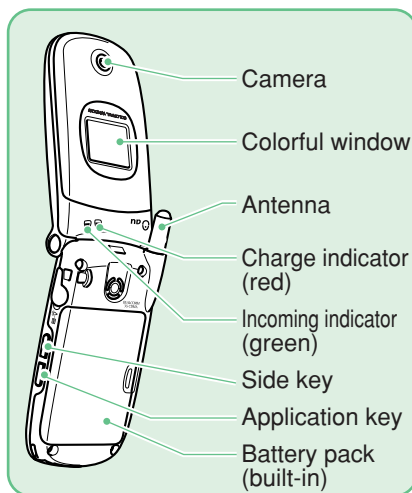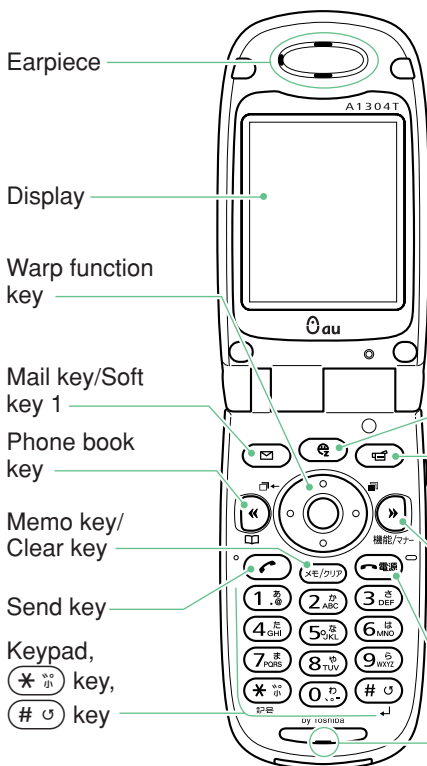

Before Use




Charging the Battery Pack


Before you use the cell phone, charge the built-in battery pack.



How to Charge the Battery Pack

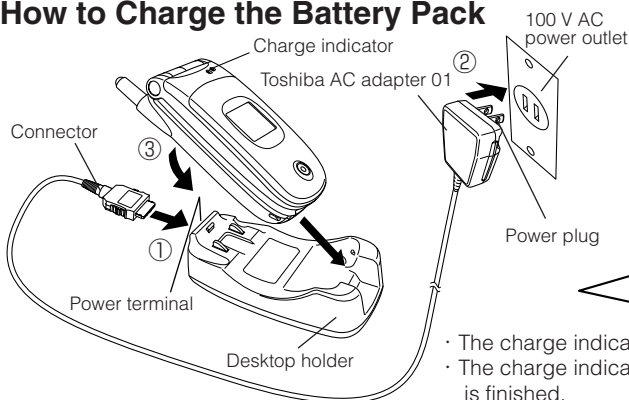

You can also charge the battery pack by connecting the Toshiba AC adapter 01 directly to the A1304T.

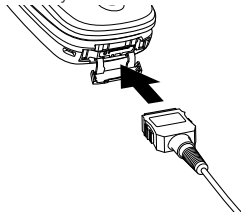

- The charge indicator lights red during charging.
- The charge indicator goes out when charging is finished.

1 Connect the Toshiba AC adapter 01 to the desktop holder.

2 Connect the Toshiba AC adapter 01's power plug to a 100 V AC power outlet.

3 Insert the A1304T, with the battery pack attached, into the desktop holder as shown in the figure.




Hold the desktop holder while removing the A1304T.



Use the battery level indicator (see page 14) on the display as a guide for charging.

Extending the Antenna

Hold the tip of the antenna and fully extend the antenna in the direction of the arrow.

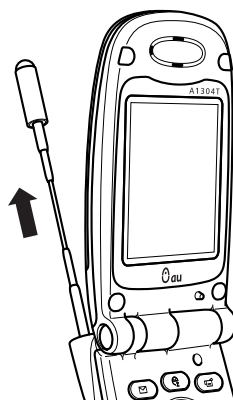

Before Use



If the antenna is not fully extended, antenna movement may adversely affect sensitivity. It is easier to send and receive a signal if the antenna is extended perpendicular to the ground.



When retracting the antenna, hold the base of the antenna and slide it straight back into the A1304T. Holding the tip and using excessive force while retracting the antenna may result in the antenna being damaged.

Turning On the Power



The standby screen appears when you turn on the power.






You can operate phone, mail, and other A1304T functions from the standby screen. When you have finished an operation, press the power key to redisplay the standby screen.


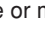
- 1 Hold down  for at least one second.

➔ The power turns on and the standby screen appears.





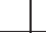

Check the signal strength.

				
Strong	Medium	Weak	Very weak	Out of service area

- You cannot receive or make calls if  is displayed.
- Sometimes you cannot receive or make calls if  is displayed.

Check the battery level.

			
Full	Low	Very low (requires charging)	Empty



Turning Off the Power

- 1 Hold down  for at least one second.




To receive calls, leave the power on.



Making Initial Settings (Bilingual Setting)

Making Initial Settings for the A1304T

When the standby screen is displayed, press  to display the Initial menu.

You can make and receive calls even if you do not make initial settings.


- 1 When the standby screen is displayed, press .

機能/マネー



➡ The 初期設定 (Initial) menu appears.

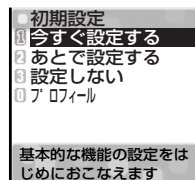


Initial menu







Before Use

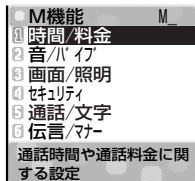- 2 Use  to select 設定しない (Setup NO) and press  (Slct).

➡ The menu for setting functions appears.



- 3 Press  , use  to select English, and press  (Slct).



The initial settings include changing the lock number, setting Caller ID, and setting the incoming call ring tone.



If you select *Setup after*, the initial settings are as shown below.

Lock No.	1234
Notify Call ID	No Addition
Incoming Call	Pattern1

Making Initial Settings for E-mail and EZweb

If you are going to use e-mail and EZweb, you must make initial settings. Your e-mail address is assigned automatically when you make initial settings. You can change this e-mail address afterwards (see page 42).

* If you are not going to use e-mail and EZweb, proceed to the next section.

1 When the standby screen is displayed, press or



Format EZweb.
Press OK,
please wait

2 Press (OK).

➔Wait a short while until the screen on the right appears.





Update the
settings.
please be
patient...



Update is
complete


3 Press (OK).

➔If you started initial settings by pressing , the E-mail menu appears. If you started initial settings by pressing , the EZ menu appears.



When  was
pressed first



When you start initial settings by pressing , the EZ menu appears (see page 66).

Learning the Basics

Let's learn about the keys.



Before Use

Keys

- : Opens the incoming history (see page 25)
- : Sends/receives e-mail, etc. (see from page 41)
- : Accesses EZweb (Internet) (see from page 63)
- : Accesses the camera (see from page 57)
- : Opens the phone book (see from page 57)
- : Makes/answers calls (see pages 23 and 24)
- to : Enter phone numbers/characters (see from page 71)
- , : Enter phone numbers/characters (see from page 71)




- : Opens the outgoing history (see page 25)
- : Displays function/manner mode settings (see page 29)
- : Sets/cancels message memo (see page 32), deletes characters (see page 72), and cancels operations
- : Turns on/off the power (see page 25) and ends calls (see pages 23 and 24)
- : Operates the camera (see page 57) and message memo
- : Starts Brew™ applications



If you are unsure of an operation or you make a mistake, press to redisplay the previous screen or to redisplay to the standby screen.

Soft Keys

When indications such as the following are displayed at the bottom of the display, you can press the corresponding soft keys to perform the indicated operations. The soft key indications vary depending on the screen.

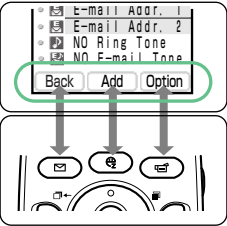

 
Soft key 1 	Performs the operation indicated at the bottom left of the screen.
Soft key 2 	Performs the operation indicated at the bottom center of the screen.
Soft key 3 	Performs the operation indicated at the bottom right of the screen.



When an indication such as Slot is displayed at the bottom center of the screen, press to perform the indicated operation.

Warp Function Key


Press the up, down, left or right button to perform operations such as selecting an item or moving the cursor, and press the center button to confirm a selected item.

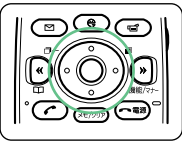


	Selects items and moves the cursor up, down, left or right.
	Confirms the selected item or starts the selected operation.

Using Menus

Launcher Menu

If you press , you can use the Launcher menu to access various A1304T functions.

The Launcher menu contains the following items.

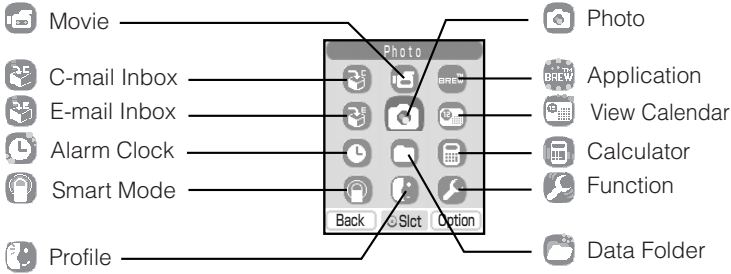

1 When the standby screen is displayed, press .

While the power is on, press the center button of the warp function key.

➔The Launcher menu appears.



Launcher menu




2 Use to select an item.



Press the up, down, left, or right button of the warp function key.





3 Press (Slct).

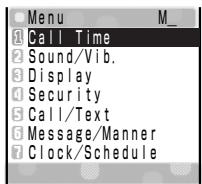
➔The item selected in the Launcher menu appears.

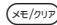

If you are unsure of an operation or you make a mistake, press  to redisplay to the previous screen or  to redisplay the standby screen.

Option Menu

If you press  when  is displayed in a screen for making function settings, inputting characters, or performing other operations, an Option menu for performing various related operations opens.

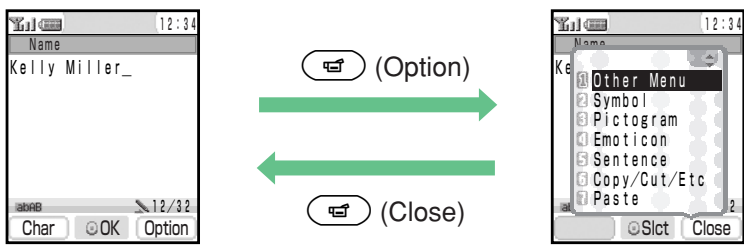


Before Use

Indicators

The indicators (pictures that indicate functions or states) allow you to check whether you have incoming mail, the current settings of functions, and other information.

Indicators

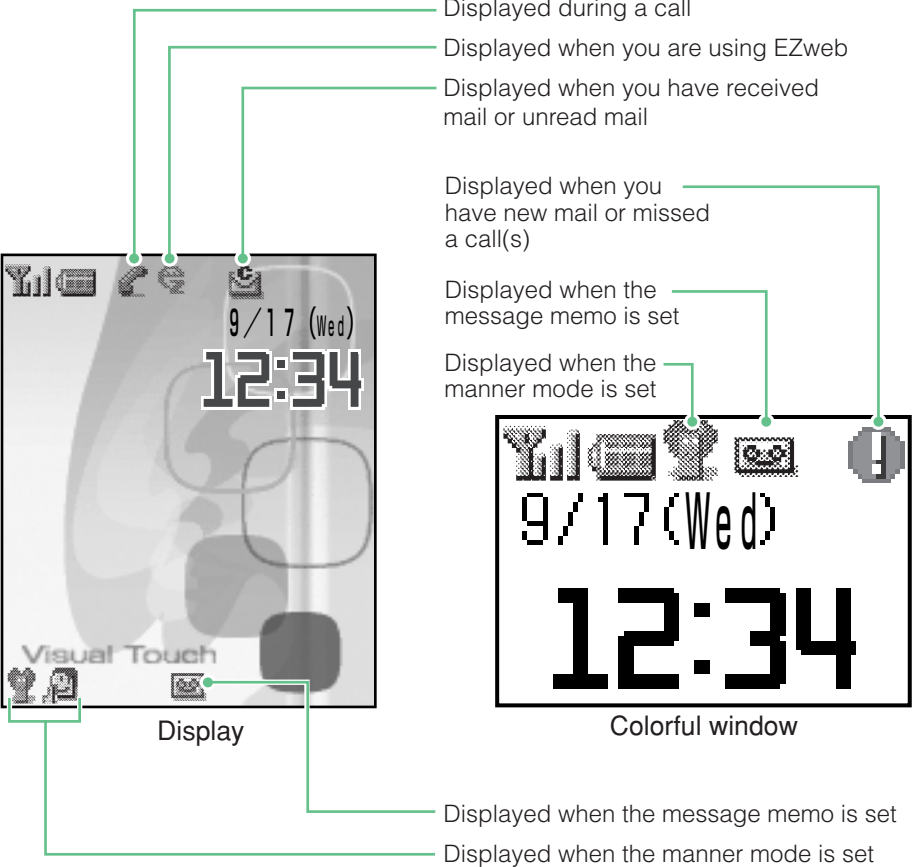

The time indication is set automatically to the current time and date.

Checking Your Phone Number and E-mail Address

You can check your phone number and e-mail address. Your e-mail address is used for sending and receiving e-mail.




- 1 When the standby screen is displayed, press .

➔The Launcher menu appears.




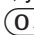
Launcher menu



- 2 Use  to select  (Profile) and press  (Slct).

➔The Profile screen appears and you can check your phone number and e-mail address.



When the standby screen is displayed, you can also check your phone number and e-mail address by pressing  and .



Making and Receiving Calls

Let's learn some basic phone operations.

Making a Call

Dial a phone number to make a call.

- 1 When the standby screen is displayed, use **0** (わ) to **9** (WXYZ) to enter the recipient's phone number.

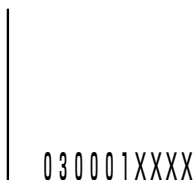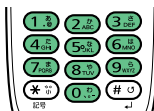

Calling a regular phone

Enter the phone number starting with the area code.

Calling a cell phone, car phone, or PHS

Enter all 11 digits of the phone number.

- After you dial a phone number, you can add 184 or 186 to the phone number if you press **[Option]** (Option), use **[184/186 Add]** to select *184/186 Add*, and press **[Slct]**.

Add 184 if you do not want to notify the recipient of your phone number.
Add 186 if you want to notify the recipient of your phone number.

➔Repeat the above operation to switch between adding 184, adding 186, and adding no prefix.

- 2 Press **[Call]**.

➔Wait a short while until you hear the ring tone.



- 3 When you have finished the call, press **[Power]**.



Answering a Call

Answer an incoming call.

- 1 **When there is an incoming call, the ring tone plays and the incoming indicator flashes.**

The phone number is displayed. If the caller's name is in the phone book, the name is also displayed.

When "ID Unsent" is displayed, the caller has not sent Caller ID.


When "Pay Phone" is displayed, the call is from a pay phone.

When "Not Support" is displayed, the call is from a phone that cannot send Caller ID.



- 2 **To answer the call, press** .






- 3 **When you have finished the call, press** .




Missed Call Notification

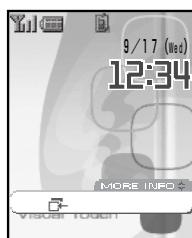If you missed a call, you are notified of the call on the display.



To check the caller's phone number, use  to select *Incoming* and press . You can then return the call (see page 25).

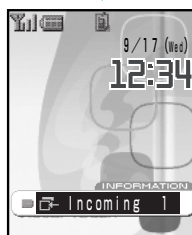

Returning Calls and Redialing (Incoming/Outgoing History)

You can display the phone number of a previous incoming or outgoing call, and then make a call to that phone number. The cell phone can store up to 20 phone numbers in order of the most to least recent.



Example: Returning a call to a phone number in the incoming history


- 1 When the standby screen is displayed, press .



➔The Incoming History screen appears.



Incoming History		
01	Kate Baker	9/17 16:00
02	030002XXXX	9/16 15:35
03	Tom Daniels	9/15 14:48
04	0900003XXXX	9/15 13:30

 To display the outgoing history, press  when the standby screen is displayed.



 The phone numbers are displayed in order of the most to least recent.


- 2 Use  to select the phone number you want to call and press  (Info).

➔The call information appears.



Incom Hist. 01		
Incom	Kate Bak	9/17 16:00
0900001XXXX		

 To make a call without checking the information, press .

 If you press , the Outgoing History screen is displayed.

- 3 Press  (Call) or .

➔A call is made to the phone number displayed.








One-ring Calls

What is a One-ring Call?

This is a call from an unknown caller who is attempting to get you to return a call to a service, such as a dating service, with very high charges. The cell phone only rings once and the call is stored in the incoming history.

One-ring Indicator

When you have received a one-ring call (the cell phone ring tone plays for less than three seconds), the red indicator  is displayed in the incoming history and "Absent" is displayed in the information for the call. Be careful when you return a call to an unknown caller.

Incoming History		
01		9/17 16:00
	0300002XXXX	
02		9/16 15:35
	0300001XXXX	
03		9/15 14:48
	Kelly Miller	
04		9/14 13:30
	0900003XXXX	







Adjusting the Incoming Ring Tone Volume


You can adjust the volume of the incoming ring tone.

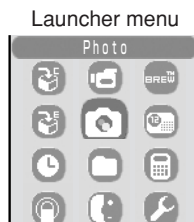

- 1 When the standby screen is displayed, press .

➡The Launcher menu appears.



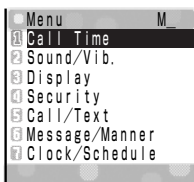

- 2 Use  to select  (Function) and press  (Slct).



 
- 3 Use  to select *Sound/Vib.* and press .

➡The Sound/Vib. (Sound/Vibrator) menu appears.

 


- 4 Use  to select *Ring Volume* and press  (Slct).

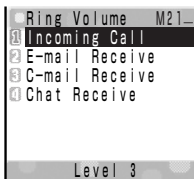

➡The Ring Volume menu appears.

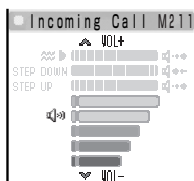

- 5 Use  to select *Incoming Call* and press  (Slct).




Adjusting the Incoming Ring Tone Volume (continued)

6 Use  to adjust the volume and press  (OK).



Each press of  increases or decreases the volume.

: After the cell phone vibrates, the incoming ring tone plays at a gradually increasing volume.

STEP DOWN: The incoming ring tone plays at a gradually decreasing volume.

STEP UP: The incoming ring tone plays at a gradually increasing volume.


 Maximum: The incoming ring tone plays at the set volume.


 ↑



 Standard (default)

 ↓

 Minimum


: The incoming ring tone does not play.

 You can use  to select  (OFF) below  (Minimum).


 You cannot check the volume of the , STEP DOWN, and STEP UP settings.

Setting the Manner Mode



You can set the manner mode in public places to prevent others around you from being inconvenienced by the incoming ring tone or other tones. The A1304T informs you of a call by vibrating.

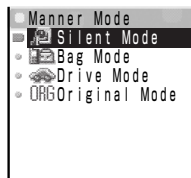


- 1 When the standby screen is displayed, hold down  for at least one second.


機能/マナー



➡The Manner Mode menu appears.

- 2 Use  to select *Silent Mode* and press  (Slct).

➡The manner mode is set and , , and  are displayed on the standby screen. The message memo is set at the same time.

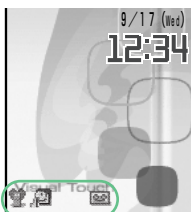

Canceling the Manner Mode

When the standby screen is displayed, hold down  for at least one second.

機能/マナー

➡The manner mode is canceled and , , and  disappear from the standby screen.



Even if the manner mode is set, the record start/end tone and shutter sound can still be heard during camera use.


Adjusting the Earpiece Volume during a Call


You can adjust the earpiece volume to one of five levels during a call.

1 During a call, press .

➔The Speaker Vol (Speaker Volume) screen appears.

: Increases the volume.

: Decreases the volume.

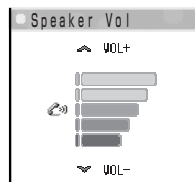

2 Press (OK).



If approximately two seconds elapses without you performing an operation, the previous screen is redisplayed.



Changing the Incoming Ring Tone

You can change the incoming ring tone. Select a ring tone from 14 fixed patterns, 7 fixed melodies, 8 effect sounds, or a melody from the Data folder (2 melodies by default).

1 When the standby screen is displayed, press .


➔The Launcher menu appears.





Launcher menu



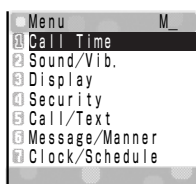

2 Use to select (Function) and press (Slct).




- 3 Use  to select *Sound/Vib.* and press .

➔The Sound/Vib. (Sound/Vibrator) menu appears.




- 4 Use  to select *Ring Pattern* and press  (Slct).


➔The Ring Pattern menu appears.

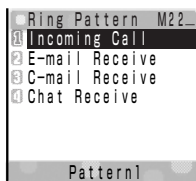


- 5 Use  to select *Incoming Call* and press  (Slct).

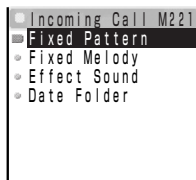

➔The Incoming Call menu appears.



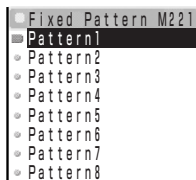


- 6 Use  to select *Fixed Pattern* and press  (Slct).

➔The Fixed Pattern menu appears.



- 7 Use  to select *Pattern3* and press  (Play).

 If you press  (Back) or  (×E/パワー), the tone stops playing and you can select another tone.



- 8 Press .

➔The incoming ring tone is set.




Recording Messages when You Cannot Answer Calls


When you cannot answer calls, the cell phone can automatically play the answering message to callers and record messages (message memos). The cell phone can record a maximum of three messages, each up to 30 seconds long.

- 1 When the standby screen is displayed, hold down **メモ/クリア** for at least one second.

➡ The Message Memo Set menu appears.

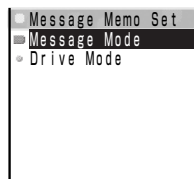


- 2 Use  to select **Message Mode** and press  (Slct).

➡ After the answering message plays, the message memo is set and  is displayed on the standby screen.



Canceling Message Memo

When the standby screen is displayed, hold down **メモ/クリア** for at least one second.

➡ The message memo is canceled and  disappears from the standby screen.



Use the voice mail service when you have turned off the power or are in a location where a signal cannot be received.



The cell phone can record up to a total of three message memos and voice memos.

Playing Messages

Play recorded message memos.

1 When the standby screen is displayed, press .

➔The Memo menu appears.




The number of messages is displayed next to the message memo indicator on the standby screen.

: Indicates that the cell phone has recorded x message memos and has space to record more.

: Indicates that the cell phone has recorded x message memos and has no space to record more.

* When the cell phone has no space to record a message memo and only voice memos have been recorded, the number of memos is not displayed.

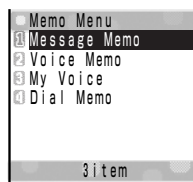


2 Use to select *Message Memo* and press (Slct).

➔The Message Memo menu appears.



3 Use to select *Play Message Memo* and press (Slct).

➔A list of message memos appears.

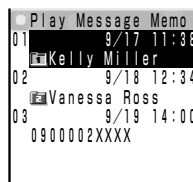






4 Use to select the message memo you want to play and press (Play).

➔The message memo plays.



To stop the message memo, press  (Stop).




To erase the message memo that is playing, press  (Option), use  to select *Erase*, and press  (Slct). Then, use  to select *Yes* and press  (OK).


Using the Phone Book



If you save the phone numbers of people you call frequently to the phone book, you can access these phone numbers easily to make calls.

Saving a Phone Book Entry


- 1 When the standby screen is displayed, hold down  for at least one second.

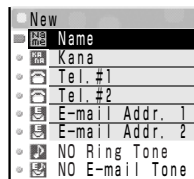
→ The New screen appears.



- 2 Use  to select *Name* and press  (Slct).

→ The Name entry screen appears.

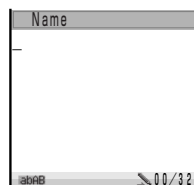




- 3 Enter a name and press  (OK).

→ The kana (reading) for the name is entered automatically.

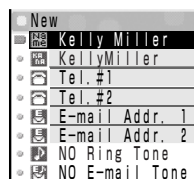 


For details on entering characters, see page 71.

 


- 4 Use  to select *Tel. #1* and press .

→ The Tel. #1 entry screen appears.

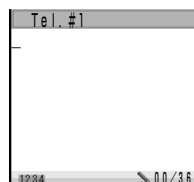

5

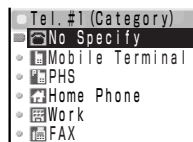

- 

6

A diagram of a circular control panel. The center is a green circle with four small white circles. Surrounding it are eight buttons with icons: top-left (envelope), top (head with gear), top-right (hand), right (double arrow), bottom-right (phone), bottom (phone with 'x'), bottom-left (phone), and left (double arrow). To the right of the panel is the text '機能/マネー'.



7

 
A diagram of a circular control panel. The center is a green circle with four small white dots. Surrounding it are eight buttons, each with an icon and a label:

- Top-left: Envelope icon, label "メール" (Mail).
- Top: Headset icon, label "通話" (Call).
- Top-right: Phone handset icon, label "通話" (Call).
- Right: Double right arrow icon, label "機能/マネ" (Function/Manage).
- Bottom-right: Phone handset icon, label "通話" (Call).
- Bottom: Double left arrow icon, label "メモ/クリア" (Memo/Clear).
- Bottom-left: Phone handset icon, label "通話" (Call).
- Left: Double left arrow icon, label "機能/マネ" (Function/Manage).





8

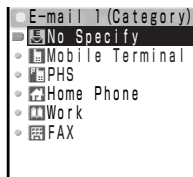A diagram of the mobile phone's navigation pad and surrounding function buttons. The central pad has a green circular center and four directional arrows (up, down, left, right). Surrounding the pad are several function buttons: a top row with 'Eメール' (Email), 'インターネット' (Internet), and 'カメラ' (Camera); a left column with '戻る' (Back) and 'メニュー' (Menu); a right column with '機能/マナー' (Function/Manner) and '電源' (Power); and a bottom row with '電話' (Phone), 'メモ/クリップ' (Memo/Clip), and '電話' (Phone). The entire interface is enclosed in a double-line border.



- 

Saving a Phone Book Entry (continued)

- 9** Use  to select an e-mail address category and press  (Slct).

➔The New screen reappears.



- 10** Press  (Add) and press  (Save).

➔The entry is saved as phone book memory number 000.



The cell phone automatically selects the lowest available memory number from 000 to 499.




You can also set other items such as a group, postal address, birthday, and URL.



Calling a Phone Number from the Phone Book


You can access phone numbers in the phone book to make calls. You can also send e-mail and c-mail from the phone book.

- 1 When the standby screen is displayed, press  to display the phone book list.





Use  to scroll through the screens. The entries are in Japanese syllabary order (あ to 他).

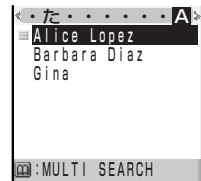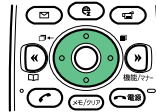

- 2 Use  to select the entry containing the phone number you want to dial and press



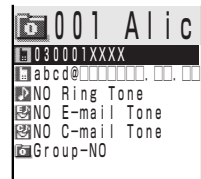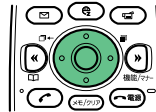

➡ The information saved to the entry appears.



- 3 Press .

➡ A call is made to the phone number in the selected entry.




If there is more than one phone number in the entry, use  to select the phone number you want to dial and then press .


Editing Phone Book Entries


You can edit the contents of phone book entries.


Example: Editing a phone number

- 1 When the standby screen is displayed, press  to display the phone book list.



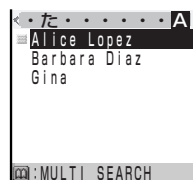

Use  to scroll through the screens. The entries are in Japanese syllabary order (あ to 他).




- 2 Use  to select the entry you want to edit and press .



➡The information saved to the entry appears.




- 3 Press  (Option), use  to select *Edit*, and press  (Slct).

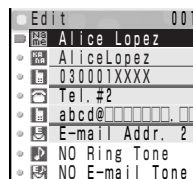
➡The Edit screen appears.


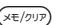
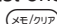


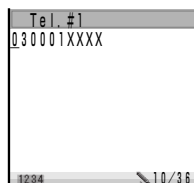

- 4 Use  to select the item you want to edit (030001XXX in this example) and press .

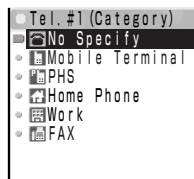


- 5 Edit the item and press  (OK).




To delete one character at a time, move the cursor to the character you want to delete and press . To delete all characters after the cursor, hold down  for at least one second. If there are no characters after the cursor, holding down  for at least one second deletes all characters for the item.

- 6 Use  to select a phone number category and press  (Slct).

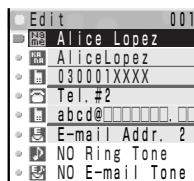

- 7 Press  (Add).

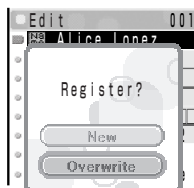

- 8 Use  to select *Overwrite* and press  (OK).



➔The contents of the phone book are edited.




For details on editing the name, see Steps 2 and 3 on page 34.



Saving a Phone Number from the Incoming History

You can save a phone number from the incoming history to the phone book.


- 1** When the standby screen is displayed, press   .

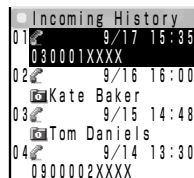


➔The Incoming History screen appears.




- 2** Use  to select the phone number you want to save and press  (Info).

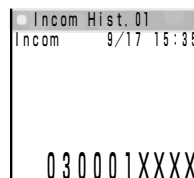
➔The call information appears.



- 3** Press  (Option), use  to select *Add Ph-Book*, and press  (Slct).

➔The Add Ph-Book (Add to Phone Book) menu appears.

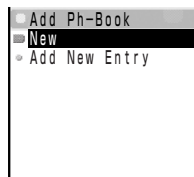



- 4** Use  to select *New* and press  (Slct).

➔The New screen appears.



For details on saving a phone book entry, see page 34.




To open the outgoing history for saving a phone number to the phone book, press   in Step 1.

Using Mail

Using E-mail

The e-mail service enables you to use an Internet e-mail address for exchanging messages with e-mail compatible cell phones, personal computers, and other devices. The cell phone is capable of sending messages containing up to 10,000 single-byte characters (5000 double-byte characters), as well as photos, movies, and other information.

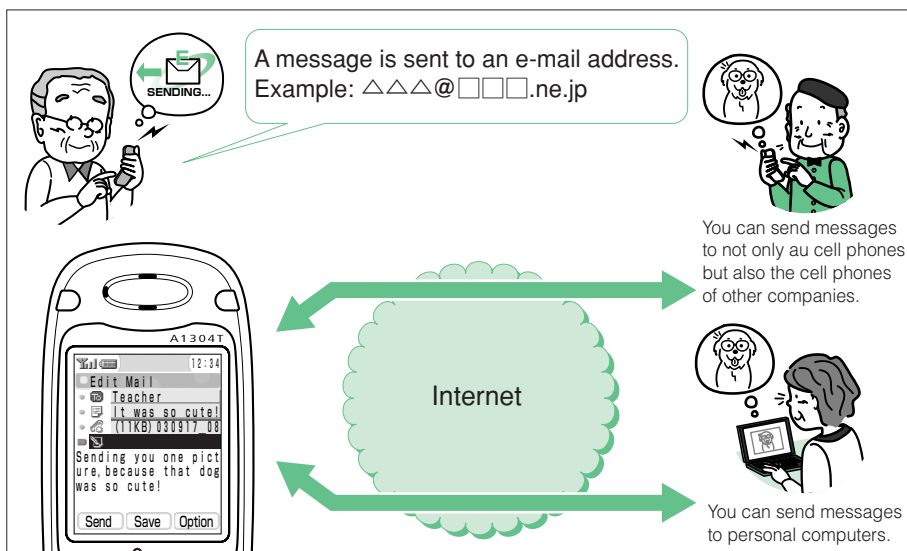

To use e-mail, you need to subscribe to the EZweb service. If you did not subscribe to this service when you purchased the cell phone, contact an au shop by phone or in person.




Before using e-mail and EZweb, be sure to make initial settings. If you have not already made the necessary initial settings, see page 16.

Changing Your E-mail Address

You can change the e-mail address that was assigned automatically when you made initial settings. For details on checking your e-mail address, see page 22.



The following shows the part of the e-mail address that you can change.

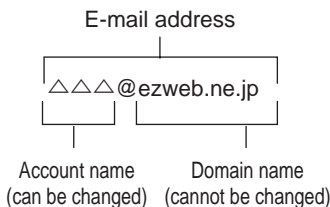


1 When the standby screen is displayed, press .

→The E-mail menu appears.






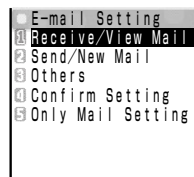

2 Use to select *E-mail Setting* and press (Slct).


→The E-mail Setting menu appears.

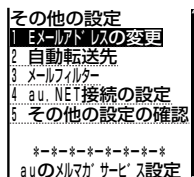


3 Use to select *Others*, press (Slct), use to select *Yes*, and press (OK).




- 4 Use  to select **Eメールアド
レスの変更 (Change E-mail
Address)**, press  (OK),
use  to select the input
box, and press  (入力).

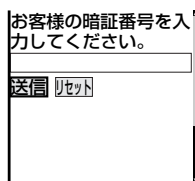

- 5 Enter your PIN, press  (OK),
use  to select **送信 (Send)**,
and press  (OK). Then,
use  to select **承諾する
(Accept)** and press  (OK).

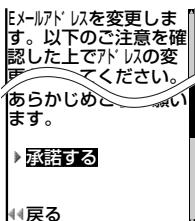

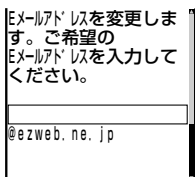

- 6 Use  to select the input
box, press  (入力), and
enter an account name.




➡The Character Entry screen appears.


Example: Entering "taro."

t : Press  (TUV) once.




a : Press  (ABC) once.

r : Press  (PQRS) three times.

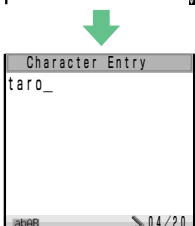o : Press  (MNO) three times.



For details on entering e-mail addresses, see page 73.

- 7** Press  (OK), use  to select 送信 (Send), and press  (OK).



メールアドレスを入力してください。

taro
@ezweb.ne.jp

送信 リセット


When You Cannot Change Your E-mail Address

- The e-mail address you entered is already in use. Enter another e-mail address.
- An unsupported character(s) was entered. Enter supported characters only (see page 71).

新しいメールアドレスは
taro@ezweb.ne.jp
です。
変更しますか？
~~は変更前の
度利用することは
できません。~~

OK キャンセル

- 8** Use  to select OK and press  (OK).

→ Check the e-mail address and then press  (OK).



正常に変更されました。





Creating and Sending E-mail Messages

You can create and send e-mail messages.


- 1 When the standby screen is displayed, press .



➔The E-mail menu appears.

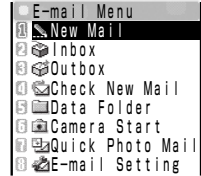

- 2 Use  to select *New Mail* and press  (Slct).

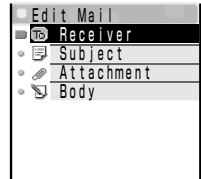

➔The Edit Mail screen appears.

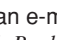


You can enter an e-mail address directly or open, for example, the phone book to select an e-mail address to enter. Press  (Option) and use  to select *Use Ph-Book* (Use Phone Book) or another item.



You can attach a photo or other data.

- 3 Use  to select *Receiver* and press  (Slct) twice.

➔The Rcvr (Receiver) entry screen appears.

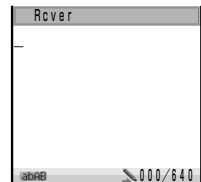







You can enter To, Cc, and Bcc addresses.


4 Enter an address and press

 (OK).


➔Enter the part of the address after @ as well. You can also enter ".co.jp," ".com," etc. from the Internet menu. Press

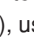 (Option), use  to select *Sentence*, press  (Slct), use  to select *Internet*, and press  (Slct).

 For details on entering e-mail addresses, see page 73.

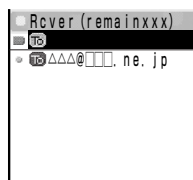


5 Press (OK).

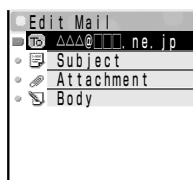


6 Use to select *Subject* and press .


➔The Subject entry screen appears.

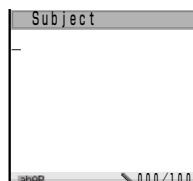

7 Enter a subject and press


 (OK).

 For details on entering characters, see page 71.

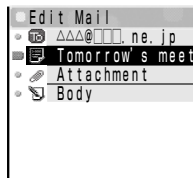


8 Use to select *Body* and press .

➔The Body entry screen appears.

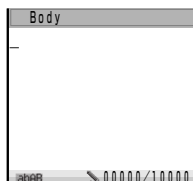


9 Enter the body of the message and press (OK).

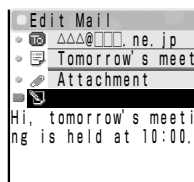

For details on entering characters, see page 71.

10 Press (Send).

➔The animation for sending e-mail is displayed and the message is sent.

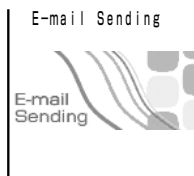


➔The message on the right appears to indicate that the message has been sent.








11 Press (OK).

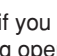
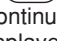
➔The E-mail menu reappears.




After you send two messages to the same recipient, you can enter the recipient's address in Step 3 if you select *Receiver*, press  (Slct) once, and then perform the following operation.


- 1) Press  (Option), use  to select *Use Sent Hst* (Use Sent History), and press  (Slct).
- 2) Use  to select the e-mail address and press  (Slct).






If you press  twice before the message has been sent or saved, "Save the data of making continue?" appears the next time you press  when the standby screen is displayed.

Opening Received E-mail Messages


You can read received messages and view attachments such as photos. When you receive messages,  appears on the standby screen and the messages are saved to the Inbox folder.

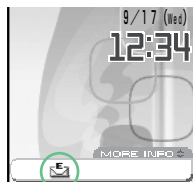- 1 When you receive a message,  appears on the standby display.



- 2 Use  to select *E-mail* and press .

➔The Inbox folder opens.

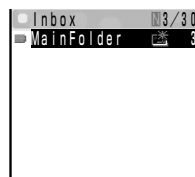


Indicator

: Indicates the folder contains a new message.

- 3 Press  (Slct).

➔The Main folder opens.

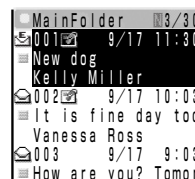



Indicators

: Indicates a read message.

: Indicates an unread message.

: Indicates a message with a photo or other attachment.

- 4 Use  to select the new message and press .

➔If there is an attached photo, it is displayed.



If there is no photo or other attachment, the contents of the message are displayed.

5 Press (Body).

➔ You can read the message.




Mai001
Date: 9/17 11:30
Subj: New dog
From: Kelly Miller
(10KB) dog.png
Do you like my new dog? His eyesight is not good so he has to wear glasses.



If you do not perform any operation for approximately 30 seconds while the attached photo is displayed, the contents of the message are displayed automatically.

Viewing a Received Message

Indicates the sender's name or e-mail address.

When there is a file attachment,  or another indicator and the file name are displayed.




Mai001
Date: 9/17 11:30
Subj: New dog
From: Kelly Miller
(10KB) dog.png
Do you like my new dog? His eyesight is not good so he has to wear glasses.


Indicates the time and date of the message.




The operation may differ depending on the e-mail settings.



Opening an E-mail Message in the Inbox Folder

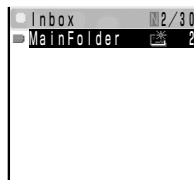When the standby screen is displayed, press  to display the E-mail menu. Then, use  to select *Inbox* and press  (Slct).



Indicator







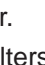

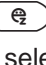





 : Indicates an unread message(s). The number on the right indicates the number of unread messages.

Use  and  to select the message you want to read in the Main folder.

 
Rejecting Spam

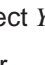You can set the mail filters to reject spam or to receive only specific mail. The mail filters can also reject mail indicated by "未承諾広告※," which tends to be spam.

 
Setting Mail filters

- 1) When the standby screen is displayed, press , use  to select *E-mail Setting*, and press  (Slct).
- 2) In the E-mail Setting menu, use  to select *Others* and press  (Slct). Then, use  to select *Yes* and press  (OK) to connect to the server.
- 3) Use  to select *メールフィルター* (Mail filters) and press  (OK).
- 4) Use  to select the input box and press  (入力). Then, enter your PIN, press  (OK), use  to select *送信* (Send), and press  (OK).

E-mail Setting

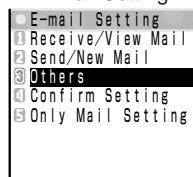

Mail Filters Setting screen

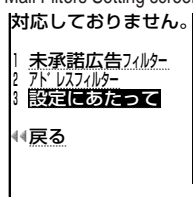

Unsolicited Advertisement and Address Filters

1. Unsolicited advertisement filter

Rejects mail that has a subject containing "未承諾広告※" (unsolicited advertisement).

2. Address filters

全受信: All e-mail is received.

指定受信設定: You can set the rejection of messages made to appear like they come from cell phones or PHSS when they do not. There are settings to specify from where messages can be received. You can select Internet and cell phone domain options (**一括設定**) and enter e-mail addresses, domains, and account names (part of the address before @) individually (**個別指定**).

指定拒否設定: This setting allows you to specify from where messages will be rejected. Enter e-mail addresses, domains, and account names (part of the address before @) individually.

なりすまし規制: If you select the **規制する** (Restrict) option when you set **全受信** (Receive all), only messages made to appear like they come from cell phones or PHSS, when they do not, are rejected.

* You can also set the rejection of messages from specific addresses after you have set **指定受信設定**.



The setting of mail filters to reject spam is recommended.




You can also fend off spam by changing your e-mail address. For details on changing your e-mail address, see page 42.

Replying to Received E-mail Messages


- 1 When the standby screen is displayed, press .

➔The E-mail menu appears.




- 2 Use  to select *Inbox* and press  (Slct).

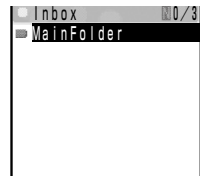

➔The Inbox folder opens.



- 3 Press  (Slct).

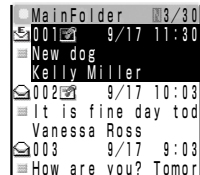➔The Main folder opens.



- 4 Use  to select the message you want to reply to and press .

➔If there is an attached photo, it is displayed.



If there is no photo or other attachment, the contents of the message are displayed.



- 5 Press  (Body).

➔You can read the message.



If you do not perform any operation for approximately 30 seconds while the attached photo is displayed, the contents of the message are displayed automatically.

Replying to Received E-mail Messages (continued)


6 Press (Reply).

➔The Edit Mail screen appears. "Re:" is prefixed to the subject and the body of the message is quoted.



7 Use to select (Body) and press .

➔The Body entry screen appears.

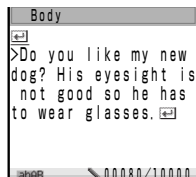

8 Enter the body of the message and press (OK).

➔For details on editing the subject, see Steps 6 and 7 on page 46.



For details on entering characters, see page 71.




9 Press (Send).

➔The animation for sending e-mail is displayed and the message is sent.



➔The message on the right appears to indicate that the message has been sent.

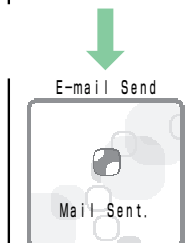

 
10 Press (OK).

➔The E-mail menu reappears.



Using C-mail

The c-mail service enables you to use a phone number for exchanging messages with c-mail compatible au cell phones. The cell phone is capable of sending messages containing up to 100 single-byte characters (50 double-byte characters).

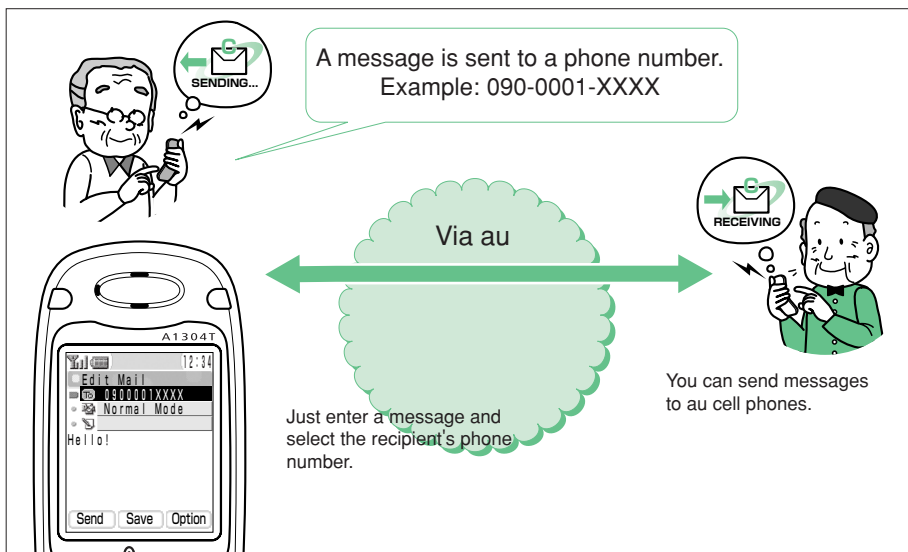


Subscribers in areas other than the metropolitan area and Chubu district need to apply for a separate subscription to use c-mail.




As part of the spam countermeasures implemented in April 2003, c-mail messages can no longer be sent without Caller ID.

Creating and Sending C-mail Messages

You can create and send c-mail messages.


- 1 When the standby screen is displayed, hold down  for at least one second.

➔The C-mail menu appears.

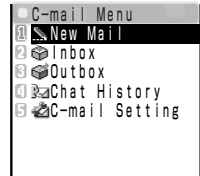

- 2 Use  to select *New Mail* and press  (Slct).

➔The Body entry screen appears.

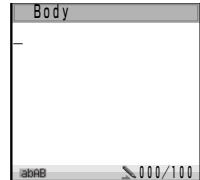


- 3 Enter the body of the message.



For details on entering characters, see page 71.

- 4 Press  (OK).

➔The Select Send Mode menu appears.

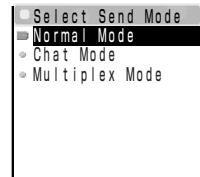


Send Modes

- Normal mode:** Allows you to send a normal c-mail message to a c-mail compatible au cell phone. This mode is for exchanging messages one at a time.
- Chat mode:** Allows you to exchange chat mode messages continuously with a specific recipient in real time.
- Multiplex mode:** This mode can no longer be used because the multiplex service was discontinued on June 6, 2003.


5 Use to select *Normal Mode* and press (Slct).

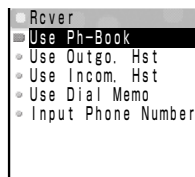

➔The Rcvr (Receiver) menu appears.



6 Use to select *Input Phone Number* and press (Slct).

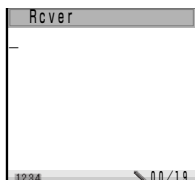➔The Rcvr (Receiver) entry screen appears.



 You can also use  to select *Use Ph-Book* (Use Phone Book), *Use Outgo. Hst* (Use Outgoing History), *Use Incom. Hst* (Use Incoming History), or *Use Dial Memo*.

 You cannot send a c-mail message if 184 is prefixed to the phone number.


7 Enter a phone number and press (OK).


➔The Edit Mail screen appears.




8 Press (Send).


➔The animation for sending c-mail is displayed and the message is sent.

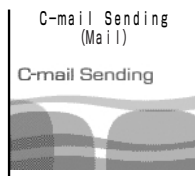



 When the recipient receives the message, "Mail sent." is displayed and the message is saved as a sent message in the Outbox folder.

Opening Received C-mail Messages


When you receive c-mail messages,  appears on the standby screen and the messages are saved to the Inbox folder.



- 1 When you receive a message,  appears on the standby display.




- 2 Use  to select *C-mail* and press .

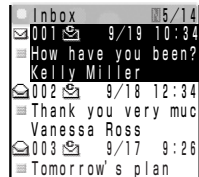➔The Inbox folder opens.




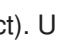



- 3 Use  to select the new message and press .

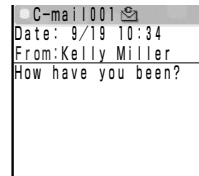


➔The contents of the message appear.




Opening a C-mail Message in the Inbox Folder

When the standby screen is displayed, hold down  for at least one second to display the C-mail menu. Then, use  to select *Inbox* and press  (Slct). Use  to select the message you want to read and press  to open the message.

Indicators

- : Indicates an unread message(s). The number on the right indicates the number of unread messages.
- : Indicates a read message.
- : Indicates an unread message.

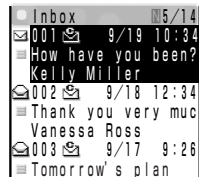

Using the Camera

You can use the A1304T camera to record movies and take photos. Movies and photos can be sent attached to e-mail.



Recording Movies


To record movies, switch the standby screen to the monitor screen.


- 1 When the standby screen is displayed, press .

➡ The monitor screen appears.




- 2 Point the lens at the subject and press  (Rec) or  (side key).

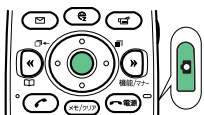


➡ The record start tone sounds, and  begins to flash when recording starts.



Stopping Recording

Press  (Stop).

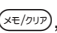When you stop recording or the recording time elapses, the end tone sounds and the movie plays back automatically. When automatic playback ends, the first frame (preview screen) of the movie is displayed. During automatic playback, you can use  to adjust the volume of the movie.

➡ If you do not want to save the movie, press , use  to select Yes, and press  (OK).



After automatic playback



The default recording time is five seconds. The recording time can be changed to up to 15 seconds.

Recording Movies (continued)

Saving Movies


Press  (Save).

➡ The movie is saved and the monitor screen reappears.



The movie is saved to the My Movie folder of the Data folder.



If the standby screen was redisplayed because you did not save the last movie recorded before 60 seconds elapsed, "Unsaved data" is displayed when you press .



The format used for the titles of movies is "S_recording date_recording time~serial number."

Example:

S_030917_1330~01



Recording date
(September 17, 2003)

Recording time
(13:30)

Serial number at the time of recording

Sending Movies Attached to E-mail Messages

See page 62.




Playing Back Movies

You can play back movies you have recorded.


- 1 When the standby screen is displayed, press .



➔The monitor screen appears.




- 2 Press  (Option), use  to select *My Movie*, and press  (Slct).

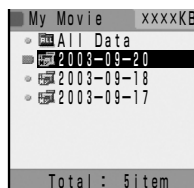

➔The My Movie folder opens.



- 3 Use  to select the folder containing the movie you want to play back and press  (Slct).

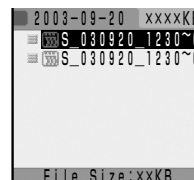



➔The folder opens.



- 4 Use  to select the movie you want to play back and press .


➔The movie plays back.




 You can send the movie attached to an e-mail message if you press  (Option), use  to select *Attach E-mail*, and press  (Slct).



Taking Photos

To take photos, switch the standby screen to the monitor screen.

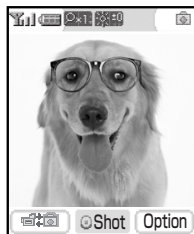


- 1 When the standby screen is displayed, hold down  for at least one second.



➡The monitor screen appears.



- 2 Point the lens at the subject and press  (Shot) or  (side key).

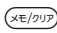➡The shutter sound is heard and the photo appears.

If you do not want to save the photo, press , use  to select *Yes*, and press  (OK).

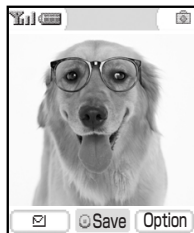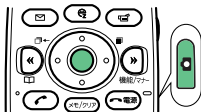

Saving Photos


Press  (Save).

➡The photo is saved and the monitor screen reappears.



The photo is saved to the My Photo folder of the Data folder.



If the standby screen was redisplayed because you did not save the last photo taken before 60 seconds elapsed, "Unsaved data" is displayed when you press .



The format used for the titles of photos is "S_date taken_time taken~serial number."


Example: **030917_1330~01**

Sending Photos Attached to E-mail Messages

See page 62.



Viewing Photos

You can view photos you have taken.

- 1 When the standby screen is displayed, hold down  for at least one second.



➔The monitor screen appears.




- 2 Press  (Option), use  to select *My Photo*, and press  (Slct).



➔The My Photo folder opens.



- 3 Use  to select the folder containing the photo you want to view and press  (Slct).

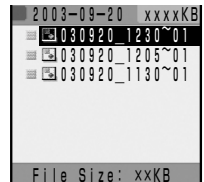


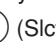
➔The folder opens.



- 4 Use  to select the photo you want to view and press .

➔The photo appears.



 You can send the photo attached to an e-mail message if you press  (Option), use  to select *Attach E-mail*, and press  (Slct).

Sending Images Attached to E-mail Immediately

You can send images (photos and movies) attached to e-mail immediately after they are taken/recorded.

- 1
- From the preview screen (after taking/recording an image), press  ().

➡The image is attached to a message and the Edit Mail screen appears.





The image is attached automatically and the  (file attachment) indicator changes to  to indicate that an image has been attached. For details on creating e-mail, see page 45.

Photo Mail Service

You can use the photo mail service to convert an image automatically to a format that can be viewed properly even if the recipient is not using a compatible au cell phone. To use the photo mail service, change the recipient's e-mail address as follows.

 
Phone Company of Cell Phone	Normal E-mail Address	New E-mail Address
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@jp-□*.ne.jp	△△△@jp-□*.nepm.jp
	△△△@□*.vodafone.ne.jp	△△△@□*.vodafone.nepm.jp
TU-KA and movie mail incompatible au phones	△△△@ezweb.ne.jp	△△△@ezweb.nepm.jp

* □ varies depending on the area.

Using EZweb

EZweb (Internet)

EZweb is an information service that allows you to enjoy the Internet on your cell phone. With EZweb, you can obtain melodies, the latest news, and other content (information) from information sites (websites of information providers).

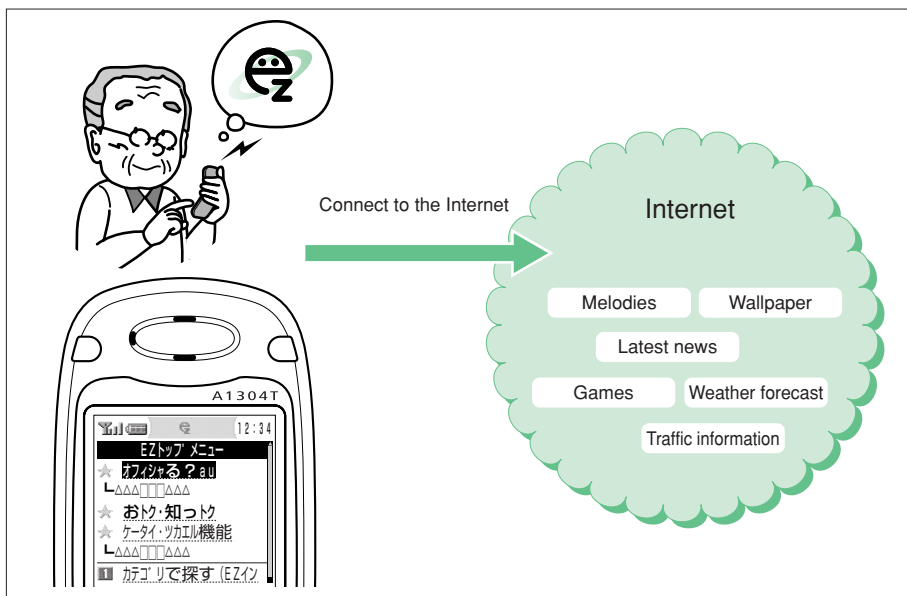

To use EZweb, you need to subscribe to the EZweb service. If you did not subscribe to this service when you purchased the cell phone, contact an au shop by phone or in person.






Before using e-mail and EZweb, be sure to make initial settings. If you have not already made the necessary initial settings, see page 16.




The layout and content of screens appearing in descriptions are only examples for the purpose of explanation. The layout and content of actual screens are subject to change.

Accessing EZweb Information Sites

Display the EZ Top menu for connecting to the Internet and accessing information sites.

- When the standby screen is displayed, press , use  to select *Top Menu*, and press  (OK).

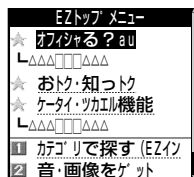



 
➔The EZ Top menu appears.










It may take a short while for the menu to appear.

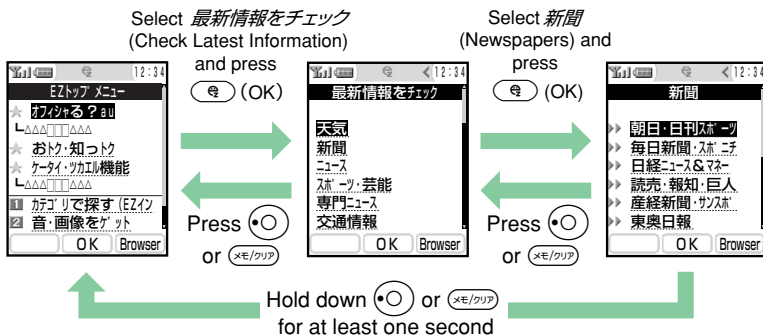Accessing Information Sites

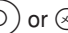Use  to select the information site you want to access and press  (OK).

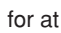

Press  or  to redisplay the previous screen, hold down  or  for at least one second to redisplay the EZ Top menu, and press  to exit EZweb.

 
When all of the information does not fit in the display, press  to scroll up one page and  to scroll down one page.



In addition to communication charges, some sites charge for providing information.

Viewing Information Sites

You can connect to EZweb (Internet) via the EZ Top menu. EZweb provides access to useful and fun information sites (services).

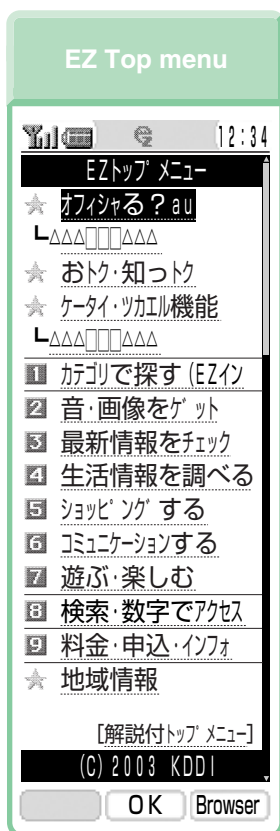

オフィシャル? au

Information recommended by au such as the latest EZweb information.

おトク・知っトク

Sites that offer presents and prizes.

ケータイ・ツカエル機能

Portal to sites offering content compatible with EZmovie and other functions.

カテゴリで探す (EZインターネット)

Allows you to access all official sites by category.

音・画像をゲット

Sites that allow you to download EZ「着うた™」 and melodies for the incoming ring tone, wallpaper, and other data.

最新情報をチェック

Portal to sites providing information such as news, weather, and stock prices.

生活情報を調べる

Portal to useful lifestyle information.

ショッピングする

Shopping sites with a wide variety of goods.

コミュニケーションする

Portal to greeting mail, bulletin board, chat, and other sites.

遊ぶ・楽しむ

Provides various entertainment and fun information.

検索・数字でアクセス

Provides access to sites by allowing you to enter key words or Internet numbers.

料金・申込・インフォ

Allows you to confirm charges and view au information.

地域情報

Provides regional information.

解説付トップメニュー

Provides EZ Top menu explanations.



The layout and content of screens appearing in descriptions are only examples for the purpose of explanation. The layout and content of actual screens are subject to change.


Downloading Melodies

Example: Downloading a melody


- 1 When the standby screen is displayed, press .



→The EZ menu appears.




- 2 Use  to select *Top Menu* and press  (OK).

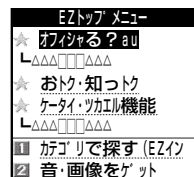

→The EZ Top menu appears.




- 3 Use  to select *音・画像をゲット* (Get Sounds and Images) and press  (OK).

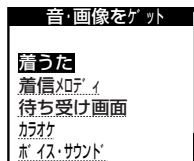

→The 音・画像をゲット (Get Sounds and Images) menu appears.



- 4 Use  to select *着信メロディ* (Melodies) and press  (OK).

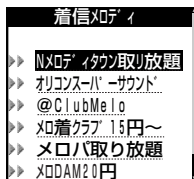→The 着信メロディ (Melodies) menu appears.



- 5** Use  to select the site you want to access and press  (OK).



➔ The download procedure appears.
Follow the procedure.

- 6** To play a downloaded melody, press  (Play).



You can use the same procedure to download images for setting as wallpaper.



To use information sites that charge for providing information, you need to enter your EZ password. If this is the first time to use such sites, you need to set the EZ password. Keep a note of the EZ password that you set.




In addition to communication charges, some sites charge for providing information.



Saving Bookmarks of Frequently Accessed Pages

You can save the titles and URLs of up to 100 frequently accessed information sites.


- 1 When a page is displayed, press  (Browser).

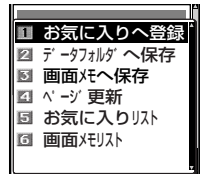→The Browser menu appears.



- 2 Use  to select **お気に入りへ登録** (Save a Bookmark) and press  (OK).

→The screen for saving the title and URL appears.

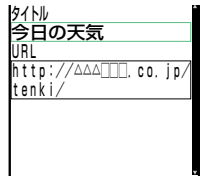

- 3 Press  twice and press  (登録).

→A bookmark of the page is saved.






You cannot save bookmarks of some pages.

Using Bookmarks to Access Pages


- 1 When the standby screen is displayed, press .

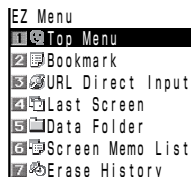

➡ The EZ menu appears.



- 2 Use  to select **Bookmark** (Save a Bookmark) and press  (OK).

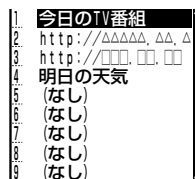➡ The list of bookmarks appears.



- 3 Use  to select the bookmark you want to access and press  (ジャンプ).

➡ The page appears.




Checking Charges

From EZweb, you can check call charges, communication charges, and other information.



- 1 When the standby screen is displayed, press .

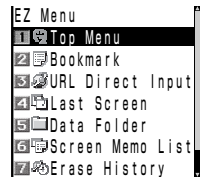

→The EZ menu appears.




- 2 Use  to select Top Menu and press  (OK).

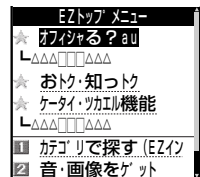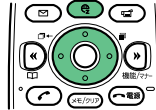→The EZ Top menu appears.



- 3 Use  to select 料金・申込・インフォ and press  (OK).


→The 料金・申込・インフォ (Charges, Applications, and Info) menu appears.

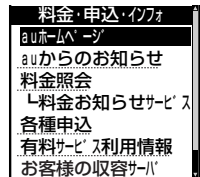

To check a list of pay sites that you have used, select 有料サービス利用情報 (Information on Pay Sites Used).

- 4 Use  to select 料金照会 and press  (OK).


→The 料金照会 (Check Charges) menu appears. Select the items you want to check.

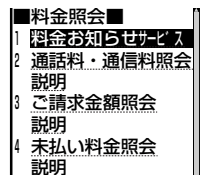




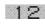
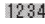
Entering Characters


Let's learn about entering characters.

Character Entry Modes

When a character entry screen is displayed, you can select the character entry mode if you press  (Char).


Menu Items

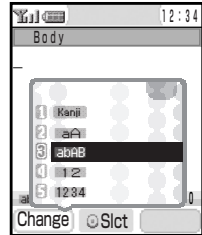


-  : Kanji conversion mode
-  : Double-byte alphanumeric mode
-  : Single-byte alphanumeric mode
-  : Double-byte number mode
-  : Single-byte number mode










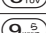
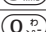

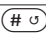

Use  to select a character entry mode and press  (Slct).

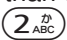
Entering Single-byte Alphanumeric Characters

 Before you enter single-byte alphanumeric characters, switch to single-byte alphanumeric mode.

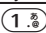

You can use the keys  to  to enter characters. More than one character is assigned to each key. For example, each press of  changes the displayed character to the next character assigned to the key in the order of a → b → c → A → B → C → 2.

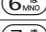The following table shows the key assignment for entering characters.


Key	Number of Times to Press the Key												
	1	2	3	4	5	6	7	8	9	10	11	12	13
	.	@	—	_	/	:	~	?	,	'	1		
	a	b	c	A	B	C	2						
	d	e	f	D	E	F	3						
	g	h	i	G	H	I	4						
	j	k	l	J	K	L	5						
	m	n	o	M	N	O	6						
	p	q	r	s	P	Q	R	S	7				
	t	u	v	T	U	V	8						
	w	x	y	z	W	X	Y	Z	9				
	0												
	Single-byte symbols (switches an unconfirmed character between uppercase and lowercase)												
	Adds a line break and displays characters in the opposite order												

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address before @).




Consecutively Entering Characters Assigned to the Same Key

After you enter the first character, press  to move the cursor () to the right and then enter the next character.

Example: Entering "ab"

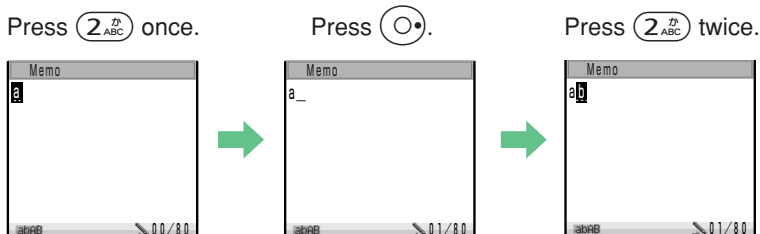

Deleting Characters

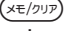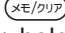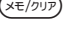To delete one character at a time, move the cursor to the character you want to delete and press . To delete all characters after the cursor, hold down  for at least one second. If there are no characters after the cursor, holding down  for at least one second deletes all characters for the item.

Starting a New line

Press .

➡ You cannot add a line break in the c-mail entry screen and some other entry screens.

Entering E-mail Addresses



Before you enter an e-mail address, switch to single-byte alphanumeric mode.

E-mail Address Compatible Characters



For the account name, you can enter up to 20 single-byte alphanumeric characters including hyphens (-), commas (,) and periods (.). However, you cannot enter periods consecutively or at the beginning or end, or enter a 0 at the beginning.

How to Enter E-mail Addresses



You can enter ".co.jp," etc. from the Internet menu.

Use (1.あ) to (0.わ) to enter characters and numbers.

Press (1.あ) twice to enter @.

Example: Entering "taro13@toshiba.co.jp" for the recipient's e-mail address

1

Enter "taro13."

t : Press (8.と) once.

a : Press (2.あ) once.

r : Press (7.る) three times.

o : Press (6.お) three times.

1 : Press (1.あ) and press (#.う) once.


3 : Press (3.あ) and press (#.う) once.








2

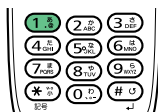


Enter "@."

@: Press (1.あ) twice.



3 Enter "toshiba" and press .

- t : Press  once.
 o : Press  three times.
 s : Press  four times.
 h : Press  twice and press .


- i : Press  three times.
 b : Press  twice and press .

- a : Press  once.



4 Press (Option), use to select *Sentence*, and press .

➔The Sentence Category menu appears.

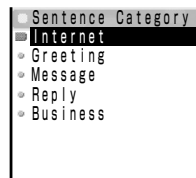

5 Use to select *Internet* and press .

➔The Internet menu appears.




6 Use to select *.co.jp* and press .

➔".co.jp" is entered.




Entering Pictograms


In addition to kanji, hiragana, katakana, English, numbers, and symbols, you can enter pictograms such as ♥.

- 1 When a character input screen is displayed, press  (Option).


➡The Option menu appears.

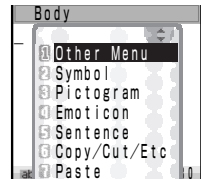



You can also enter symbols, emoticons, and sentences (fixed text) from the Options menu.

- 2 Use  to select *Pictogram* and press  (Slct).

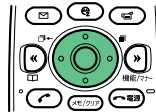

➡The Pictogram screen appears.












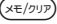

- 3 Use  to select the pictogram you want to enter and press  (Slct).

➡The pictogram is entered in the character entry screen.



You can enter pictograms consecutively if you press  (Cont.) instead of  (Slct).

Troubleshooting

Symptom	Check Item
Cannot turn on the power.	Is the battery pack attached correctly? ●Correctly attach the battery pack.
	Is the battery pack charged? ●Charge the battery pack. (Page 12)
	Did you hold down  for at least one second? ●Hold down  for at least one second. (Page 14)
Cannot make calls.	Is  displayed on the display? ●Fully extend the antenna and make a call in a location where  is not displayed. (Pages 13 and 14)
	Did you enter the phone number starting with the area code? ●When making a call to a phone other than a cell phone, you need to enter the area code first even if you are inside the same area. (Page 23)
	Is the antenna extended? ●Hold the tip of the antenna and fully extend the antenna.
	Is the power turned on? (Page 14)
	Did you press  ? (Page 23)
Cannot receive calls.	Is  displayed on the display? ●Fully extend the antenna and move to a location where  is not displayed. (Pages 13 and 14)
	Is the power turned on? ●Hold down  for at least one second. (Page 14)
No response when a key is pressed.	Is the power turned on? ●Hold down  for at least one second. (Page 14)
A warning tone sounds and the power turns off.	Is there enough power left in the battery pack? ●Charge the battery pack. (Page 12)
Calls are answered automatically.	Is message memo set? ●Hold down  for at least one second and cancel message memo. (Page 32)
Cannot hear the other party.	Is the earpiece volume level too low? ●Use  to increase the volume during a call. (Page 30)

Other Features

The A1304T has other useful features in addition to those described in this manual.

Clock Wallpaper Download

From TOSHIBA User Club Site, you can download clock wallpaper for the colorful window.

Only Mail Function

You can send a message with a movie or photo attachment to a specific recipient without opening the cell phone.

Cuckoo Clock

On the hour, a movie is displayed on the colorful window to inform you of the time.

EZ「着うた™」

You can set an artist's song as is for the incoming ring tone.

Incoming Call Notification by Movie

You can set a movie you recorded yourself as the incoming ring tone and incoming screen.

Editing of Movies

You can add subtitles (2 lines of 10 characters) and edit the sound of movies after recording.

Custom Settings

To meet the purpose of use, you can simultaneously change settings such as the wallpaper and incoming ring tone settings by switching between different groups of settings.

Dictionary Download

From TOSHIBA User Club Site, you can download and use dictionaries that have been customized for different purposes.

Opening Vibration

The A1304T vibrates to notify you of missed calls and new mail as it is opened.

Index

A

- Accessories10
- Antenna13

B

- Basics17
- Battery level14
- Battery pack10, 12

C

- Calls
 - 184/18623
 - Answering a call24
 - Making a call23
 - Returning a call/redialing25
- Camera
 - Movies57
 - Still images (photos)60
- Charging the battery12
- Checking charges70
- C-mail53
 - Creating and sending c-mail54
 - Opening c-mail56
- Colorful window21

D

- Desktop holder10, 12
- Display21
- Domains42
- Downloading melodies66

E

- Earpiece volume30
- E-mail41
 - Attaching images (photos, movies)62

- Creating and sending e-mail45
- Initial settings16
- New mail48
- Opening e-mail48
- Replying to e-mail51

E-mail address22

- Changing e-mail address42
- Entering e-mail address73

Entering characters71

- Character entry modes71
- Consecutively entering characters
 - assigned to the same key72

Etiquette3

EZ Top menu64, 65

EZweb63

- Accessing information sites64
- Initial settings16

I

Images (photo, movies)

- Attaching to e-mail62
- Photo mail service62

Incoming history25

Incoming indicator11, 24

Indicators21

Information sites64, 65

Initial settings15, 16

Internet63

- Information sites64, 65

K

Keys17

L

Launcher menu19

M

Mail

C-mail	53
Creating and Sending c-mail ..	54
Creating and Sending e-mail ..	45
E-mail	41
Opening c-mail	56
Opening e-mail	48
Replying to e-mail	51

Message memo

Playback	33
Recording	32

Movies

Attaching to e-mail	62
Playback	59
Recording	57

N

Names of Parts

O

One-ring calls	26
Option menu	20
Outgoing history	25

P

Phone book	34
Editing entries	38
Making calls	37
Saving data	34
Saving phone numbers from incoming history	40
Phone Number	22
Pictograms	75

Playback/viewing

Message memo	33
Movies	59
Photos	61

Power

Turning on	14
Turning off	14

R

Ring tone

Adjusting volume	27
Changing ring tone	30

S

Signal

Sites

Saving bookmarks	68
Using bookmarks to access sites ..	69

Soft keys

Spam

Standby screen

Still images (photos)

Attaching to e-mail	62
Photo mails service	62
Taking photos	60
Viewing photos	61

W

Warp function key

What the cell phone offers

Dial services available on au cellphones

- Calls to regular phones nationwide
- Calls to cellphones, PHS and carphones nationwide
- au international call service
(005345: There is no need to apply for this service.)
- Pager calling (You must input the area code.)
- 171 (NTT disaster services voice mail)
- 177 (Weather report: You must input the area code.)
- 117 (Time)
- 104 (NTT phone number guide)
- 110 (Emergency calls to police)★
- 119 (Emergency calls to fire brigade)★
- 118 (Emergency calls to the Maritime Safety Agency)★
- Maritime calls

* The following NTT services are not available.

Collect calls, telegrams, message dialing, dial Q2, calls to Shinkansen bullet train, and 116 (NTT sales offices)

★ When making emergency calls to the police, fire brigade, and the Maritime Safety Agency, be sure to check where you are calling from.

In some areas you are calling, you might not be able to be connected to the supervisory contact point for that service.

*For inquiries, call:

au Customer Service Center (General information)


From regular phones:  0077-7-111 (toll free)

From au cellphones: 157 (area code not required) (toll free)

Sales: au (KDDI)・OKINAWA CELLULAR TELEPHONE COMPANY
Manufacturer: **TOSHIBA CORPORATION**



モバイルリサイクルネットワーク
携帯電話・PHS・充電器の回収・リサイクル

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the  logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

03/07-80
August 2003 edition